

Manual 01-00038

Audi Q7

VW Touareg

Porsche Cayenne



01-00038


1. 01-00035-003
2. 01-00035-012
3. 01-00035-030
4. 1090-20-T-21
5. 1090-20-T22

Brukes med

Cylinder ≤ 22 T
01-00037
01-00018




DEMONTERING NAV

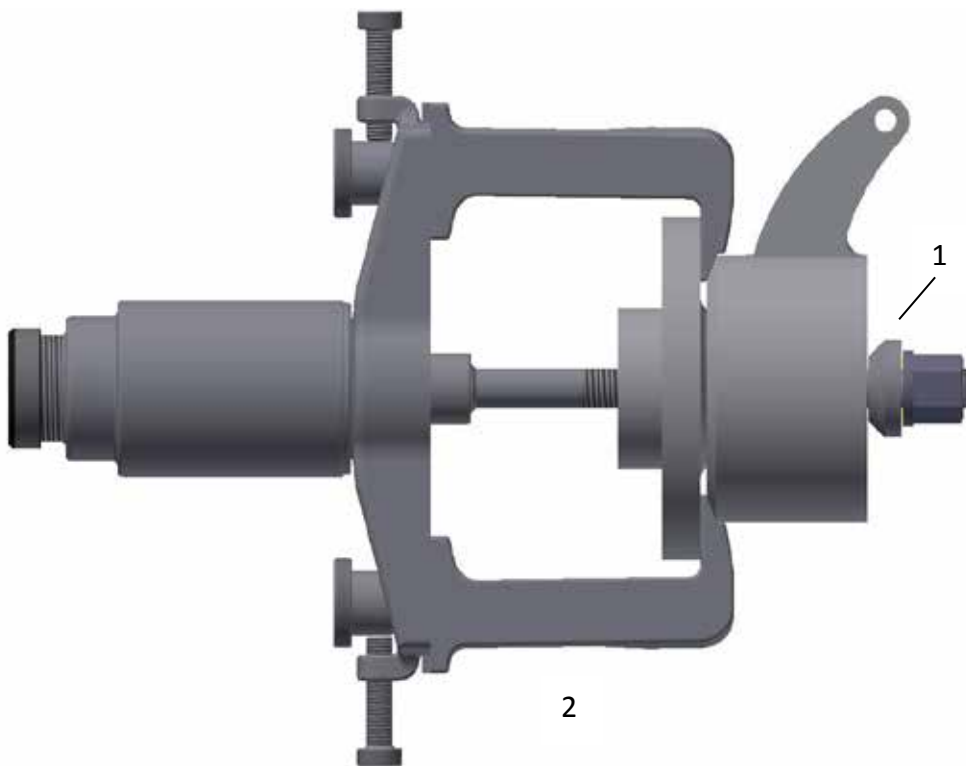

1. 01-00035-003
2. 01-00037




DEMONTERING HJULLAGER

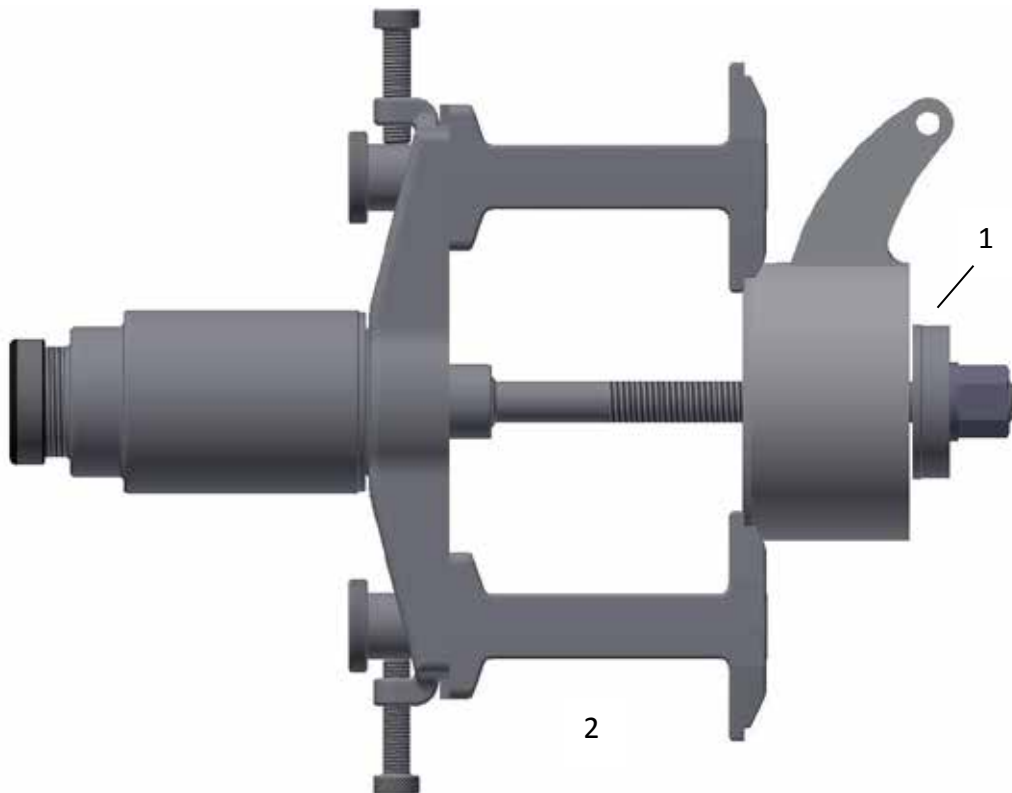

1. 01-00035-012
2. 01-00018




MONTERING HJULLAGER

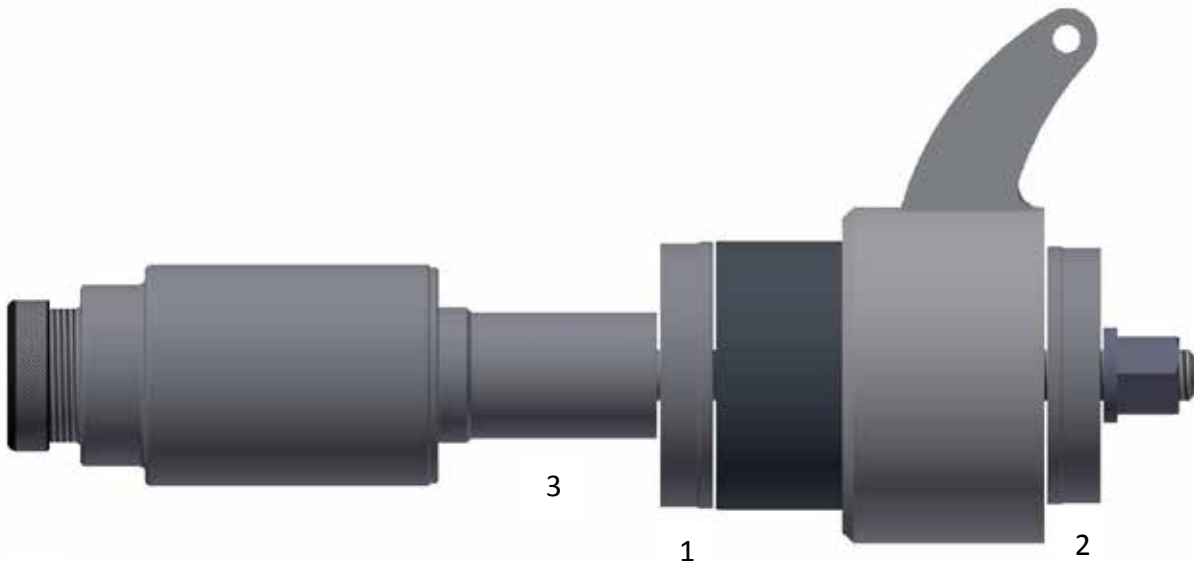

- | |
|-----------------|
| 1. 1090-20-T22 |
| 2. 1090-20-T21 |
| 3. 01-00035-030 |

MONTERING NAV

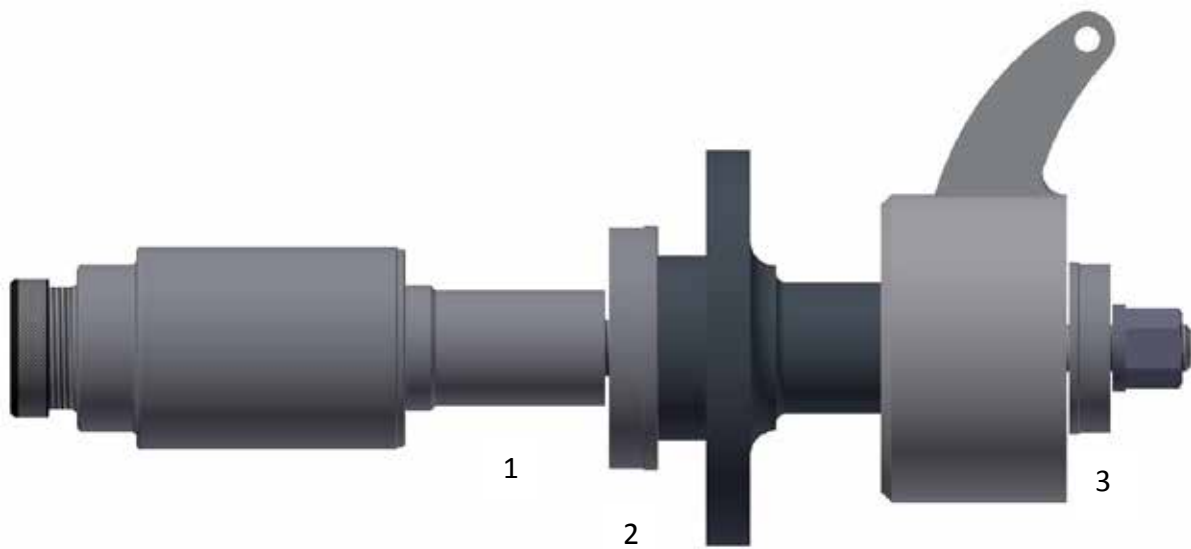

- | |
|-----------------|
| 1. 01-00035-030 |
| 2. 1090-20-T22 |
| 3. 01-00035-012 |